

SG1 SERIES FUEL PUMP ROTATION ENDERLE FUEL INJECTION

1830 N. VOYAGER AVENUE
SIMI VALLEY, CA 93063
(805)526-3838 • FAX (805)526-2885

THE SG1 SERIES FUEL PUMP WILL OPERATE IN CLOCKWISE OR COUNTER CLOCKWISE ROTATION. FUEL FLOWS BETWEEN THE GEAR AND THE INSIDE WALL OF THE CASE, WHEN LOOKING AT THE FRONT OF THE ENGINE, CAM DRIVEN PUMPS TURN CLOCKWISE (FIGURE 1) AND MOST BELT DRIVEN PUMPS TURN COUNTER CLOCKWISE WHEN BEHIND THE BELT DRIVE PULLEY(FIGURE 2).

CLOCKWISE ROTATION OR CAM DRIVEN

IN THIS PICTURE THE TOP COVER
HAS BEEN REMOVED TO SHOW
GEAR ROTATION INSIDE THE
PUMP.

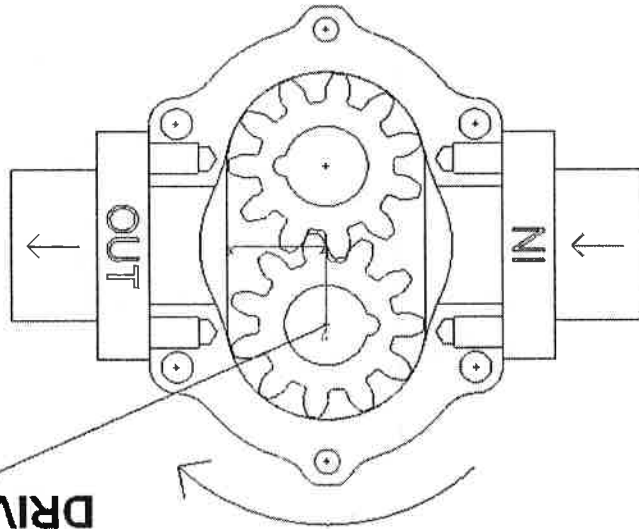


Figure 1

COUNTER CLOCKWISE ROTATION OR BELT DRIVEN

IN THIS PICTURE THE TOP COVER
HAS BEEN REMOVED TO SHOW
GEAR ROTATION INSIDE THE PUMP.

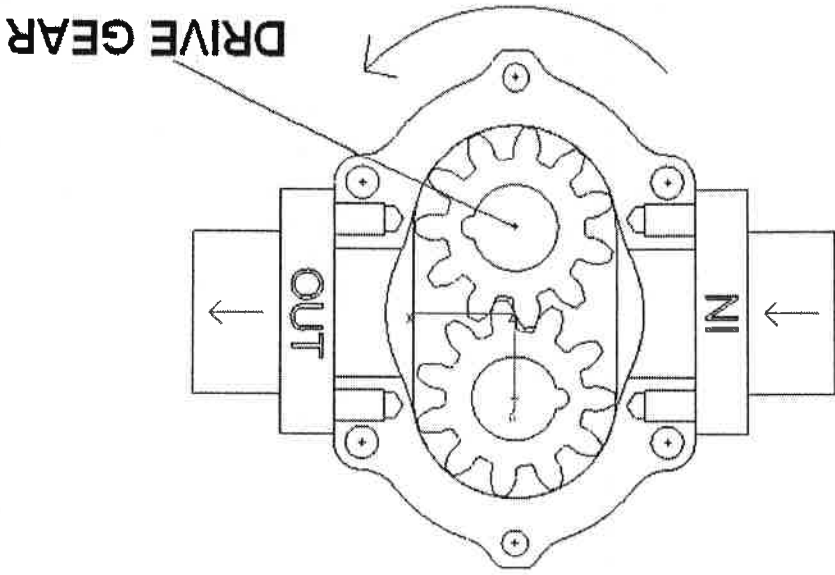


Figure 2