


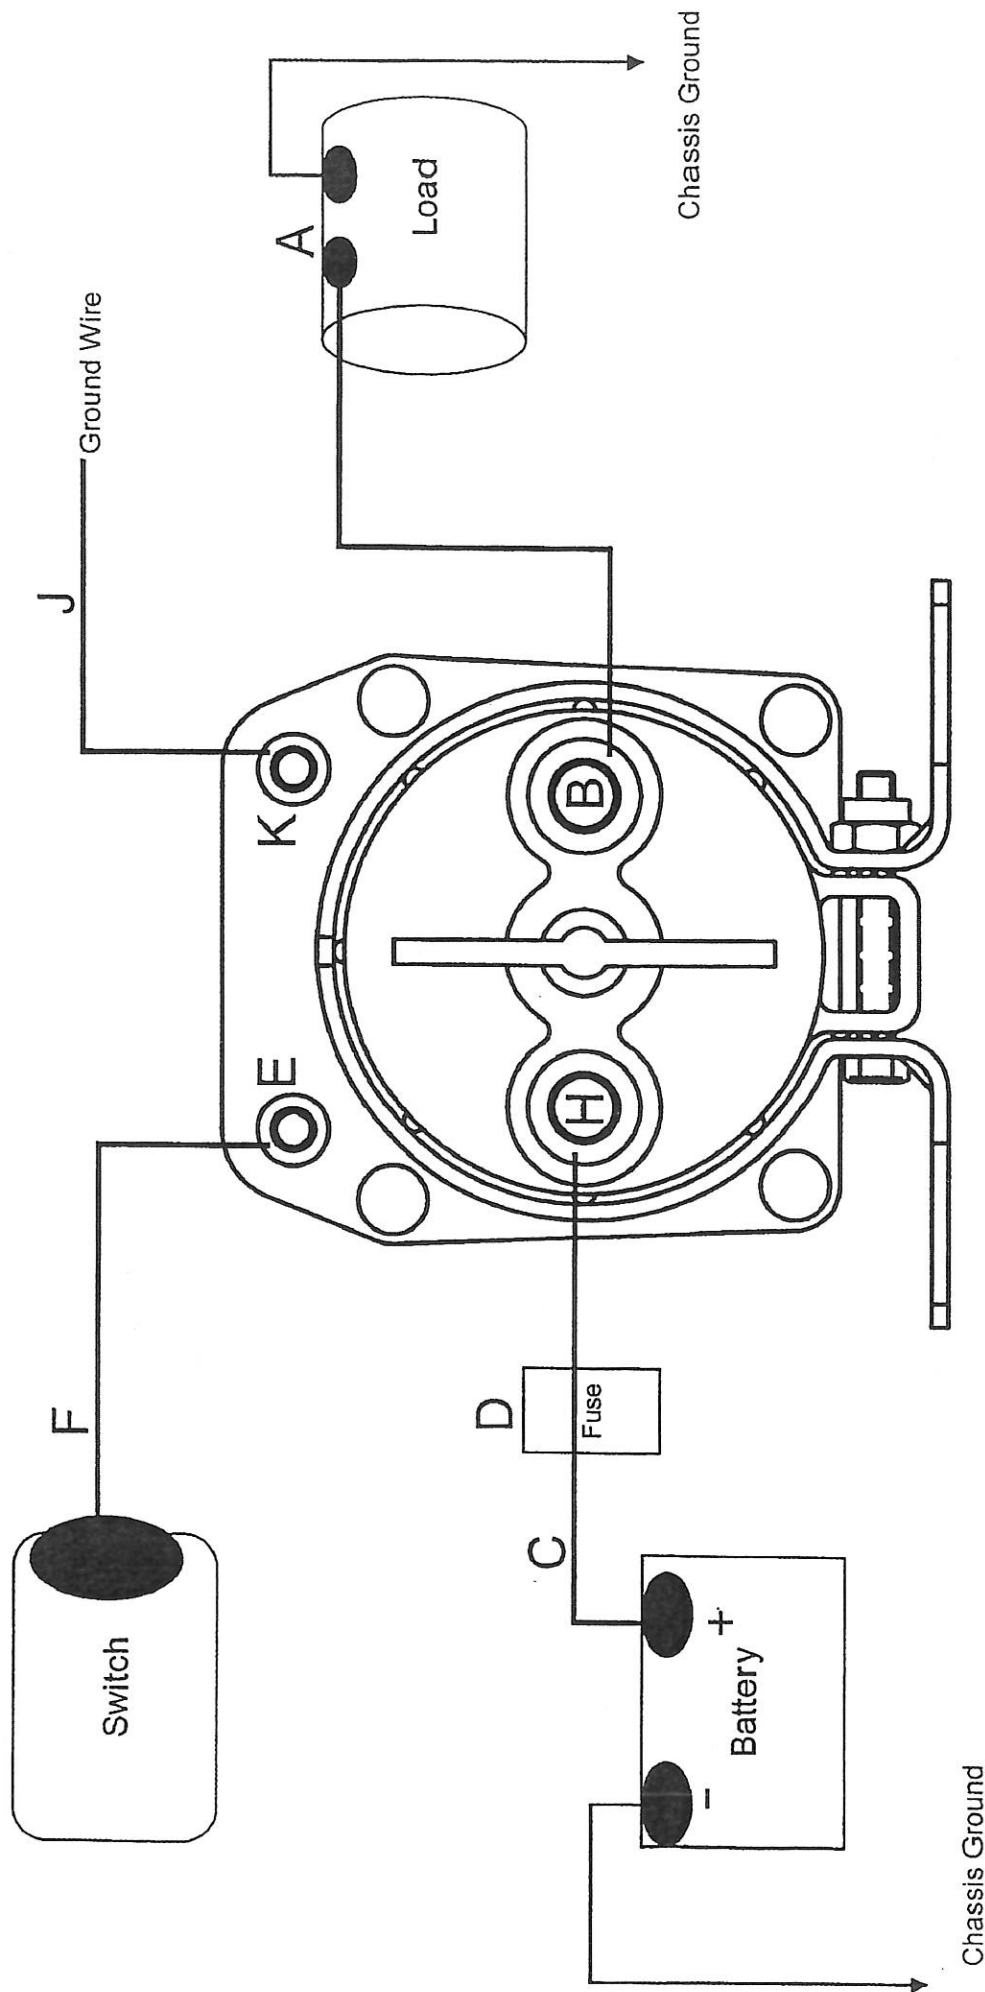

Mounting Instructions

1. Select a desired mounting location
2. Using the contactor as a template, mark the centers of the mounting holes.
3. Using a 1/4 inch drill bit, drill the holes marked in the previous step.
4. Mount the contact using 1/4 inch bolts and nuts.
5. Wire the relay according to the wiring diagram

Wiring Diagram

1. Connect Load (A) to high current stud (B)
2. Connect battery positive (C) to fuse (D)
3. Connect fuse (D) to high current stud (H)
4. Connect Switch (F) to coil stud (E)
5. Connect Ground Wire (J) to coil stud (K)